

























# Sonnen- und Windsensor GF0024, GF0025



## Funkcode einlernen

- 1**    Volt
- 2**    → 
- 3**    → 3 Sek.
- 4**  →    
 
- 5**  →   → 1 Sek.  

- 6**  →    
 
- 7** **FERTIG!** 