








 
















Sun and wind sensor GF0024, GF0025

Setting of radio codes



- 1**    Volt
- 2**    → 
- 3**    → 3 sec
- 4**  →  
 
- 5**  →   → 
- 6**  →  
 
- 7** **READY!** 