

























# Sensore sole e vento GF0024, GF0025



Inizializzare codice radio

- 1**    Volt
- 2**    → 
- 3**    → 3 sec
- 4**  →    
 
- 5**  →   → 1 sec  

- 6**  →    
 
- 7** **PRONTO!** 