

GEIGER

ANTRIEBSTECHNIK

Tubular motor:

GEIGER PRO.TECl ine

Motor control:

PRO.TECl ine Radio (GB45R-../..)

for rolling shutters, awnings and screens



EN

**Original assembly and
operating instructions**

EN

Index

1. General information	2
2. Guarantee	3
3. Intended use	3
4. Safety instructions	3
5. Safety instructions for assembly	4
6. Installation instructions	5
7. Information for the specialist electrician	6
8. Initial commissioning	6
9. Further functions	7
10. Setting of the end positions	8
11. What to do if	10
12. Declaration of conformity	11
13. Technical data	12
14. Maintenance	12
15. Disposal information	12

EN

1. General information

Dear customer,

By purchasing a GEIGER motor you have decided on a quality product from GEIGER.

Thank you very much for your decision and the confidence placed in us.

Before you put this drive into operation please observe the following safety instructions.

It serves for the prevention of danger and for the avoidance of personal injury and damage to property.

The installation and operating instructions contain important information for the installer, the specialist electrician and the user. Please pass on these instructions if you transfer the product. These instructions should be kept by the user.


2. Guarantee

In the case of incorrect installation contrary to the installation and operating instructions and/or constructional modification, the legal and contractual guarantee for property damage and product liability lapses.

3. Intended use

The tubular motors of the model range **PRO.TEcline (GB45R-../..)** with the **Radio** system are designed exclusively for the operation of rolling shutters and screens.

The motors may not be used for the operation of roller grilles, garage doors, furniture and lifting tools.

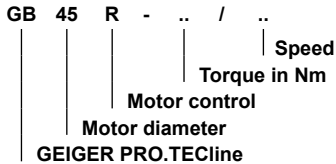

4. Safety instructions



ATTENTION: Important safety instructions. For personal safety, it is important to follow these instructions. Please keep these instructions for future reference.

- ▶ Do not allow children to play with stationary controls. Keep remote controls away from children.
- ▶ The installation is to be checked regularly for defective balance, signs of wear or damaged cables and springs, if relevant.
- ▶ Do observe the moving sun protection system and keep persons away until it has closed completely.
- ▶ When operating the manual release with the sun protection system open, please be cautious as it can fall down quickly if springs or tapes wear off or are broken.
- ▶ Do not operate the device if operations such as, for example, window cleaning are to be carried out in the vicinity.
- ▶ Disconnect the automatic controlled device from the mains power supply if operations such as, for example, window cleaning are being carried out in the vicinity.
- ▶ During operation observe the danger zone.
- ▶ Do not use the installation if people or objects are in the danger zone.
- ▶ Urgently shut down damaged installations until repair.
- ▶ Unconditionally shut down the unit during maintenance and cleaning operations.
- ▶ Pinching and shearing points are to be avoided and must be secured.
- ▶ This appliance can be used by children aged 8 and above and persons whose physical, sensorial or mental capacities are impaired, or who have no experience or know-how if they have been supervised or been given instructions on the use of the appliance and if they understand the possible resulting dangers. Children are not permitted to play with the device. Cleaning and maintenance should not be carried out by children.
- ▶ The rated sound pressure level is less than 70 dB(A).
- ▶ Disconnect the device from the mains power supply for maintenance and replacement of parts.
If the motor is disconnected via a plug connection the operator must be able to control - from any place to which it has access – that the plug is removed.
If this is not possible - due to design or installation - the disconnection from the power supply must be ensured via locking in the disconnected position (e.g. isolator).
- ▶ The motor tube can get very hot during prolonged use.
When working on the unit, do not touch the tube before it has cooled down.

EN

5. Safety instructions for assembly



ATTENTION: Important safety instructions. Follow all installation instructions, as incorrect installation can lead to serious injuries.

- ▶ When mounting the motor without any mechanical protection of the driven parts and of the tube which may become hot, the motor must be installed at a height of at least 2.5 m above the ground or of another level which provides access to the drive.
- ▶ Before the motor is installed, all cables which are not needed are to be removed and all equipment which is not needed for power-operated actuation is to be put out of operation.
- ▶ The actuating element of a manual release must be mounted at a height of less than 1.8 m.
- ▶ If the motor is controlled by a switch or pushbutton, the switch or pushbutton must be mounted within eyeshot of the motor. The switch or pushbutton must not be located in the vicinity of moving parts. The height of installation must be at least 1.5 m above the floor.
- ▶ Permanently installed control devices must be attached visibly.
- ▶ In case of devices extending horizontally, a horizontal distance of at least 0.4 m must be respected between the fully extended part and any other fixed element.
- ▶ The rated speed and the rated torque of the motor must be compatible with the device.
- ▶ The mounting accessories that are used must be designed in accordance with the selected rated torque.
- ▶ Good technical knowledge and good mechanical skills are necessary for the motor installation. Incorrect installation can lead to serious injury. Electrical work must be carried out by a qualified electrician in accordance with the regulations in force locally.
- ▶ The mains connection cable must be suitable for the ambient conditions and meet the construction requirements.
- ▶ If the appliance is not equipped with a plug or other means of disconnection from the mains which has a contact opening in each pole corresponding to the conditions of overvoltage category III for full disconnection, such a disconnection device must be installed in the fixed electrical installation in accordance with the installation regulations.
- ▶ Do not mount the connecting cables near hot surfaces.
- ▶ A plug for the disconnection of the motor from the power supply must be accessible after installation.
- ▶ If the mains connection cable of this unit is damaged, it must be replaced by the manufacturer or its customer service or a similarly qualified person in order to avoid any danger.
- ▶ The device must be mounted as described in the installation instructions. Fixations shall not be made with adhesives since they are regarded as unreliable.

6. Installation instructions



Prior to installation please check to ensure there is no visible damage to the motor like cracks or open cables.



Before fixing please check the strength of the masonry and of the surface.



Caution: If the tube is screwed/riveted to the drive, the measure must be taken from the tube end to the center of the drive and marked on the tube.

When drilling the winding shaft never drill into the area of the tubular motor!

When inserting into the shaft, the tubular motor must not be struck and must not be allowed to fall into the shaft.

Installation into the rolling shutter:

Fix motor support to available stud bolts or in the side frame.

Insert motor into the shaft with a suitable adapter and drive up to the stop of the shaft adapter.

Insert roller capsule on the opposite side.

Put shaft with motor on motor support or on pivoting engine bearer. On the opposite side pull out roller capsule until bolt fits into ball bearing.

Screw together roller capsule with shaft.

Screw together shaft with tubular carrier.

Fix rolling shutter casing to shaft.

Alternatively: Use mounting plates for front elements.

Insert the motor. The bearing snaps into place. To loosen: Turn the spring ring.

Installation into screens:

Insert motor with a suitable adapter and drive into the shaft up to the stop of the shaft adapter.





 
Fix the motor support on the awning. Fix the motor together with the shaft on the motor support. The bearer locks into place.

Depending on the selected motor head, different fixation systems can be used:

- Place the motor with square insert in the star-shaped bearer and lock with pin (< 20 Nm).
- Place the motor into the existing engine bearer and lock
- Place the motor in a compatible engine bearer with clip system and lock with spring or rotating lever



The GEIGER PRO.TEcline motor is suitable for shaft diameters from 50 mm!

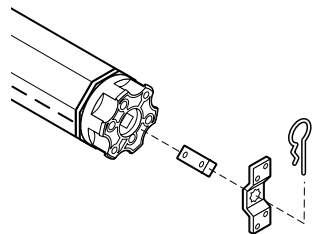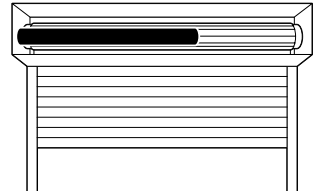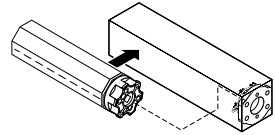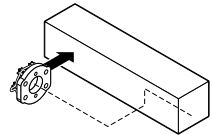

EN


7. Information for the specialist electrician



Caution: Important installation instructions. Please follow all instructions since incorrect installation can lead to the destruction of the motor and the switching unit.

The operations with the service clamps may be accomplished only by an electrical specialist.
TECline drives with radio control can be connected in parallel.

When connecting in parallel, please do observe the maximum load of the switching unit.

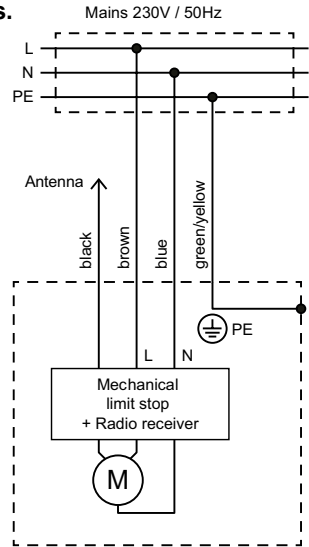


8. Initial commissioning

Teaching-in the first transmitter

1. Connect the drive to the power supply. The drive clicks (short UP and DOWN movement) and starts in teach-in mode.

For multi-channel hand-held transmitters: Select the desired channel.

 2. Press the UP and DOWN keys on the hand-held transmitter simultaneously until the drive clicks. The hand-held transmitter and the drive are connected to each other.



Changing the rotation direction of the drive

1. Press the PAIR key for at least 5 seconds. The drive clicks.
2. Press the STOP key for at least 2 seconds. The drive clicks, the direction of rotation of the drive has been changed.

Teaching-in another hand-held transmitter

1. Press the PAIR key for at least 5 seconds on the hand-held transmitter that has already been programmed. The drive clicks.
2. Press the PAIR key on the new hand-held transmitter for at least 2 seconds. The drive clicks, the new hand-held transmitter has been programmed.

9. Further functions

Deleting a hand-held transmitter

1. Press the PAIR key on a hand-held transmitter that is not to be deleted for at least 5 sec. The drive clicks.
2. Press the PAIR key for at least 10 seconds on the hand-held transmitter that is to be deleted. The drive clicks, the hand-held transmitter has been deleted.

Replacing a lost hand-held transmitter

1. Disconnect the drive from the power supply for at least 2 seconds.
2. Reconnect the drive to the power supply for 10 seconds.
3. Disconnect the drive from the power supply for at least 2 seconds.
4. Connect the drive to the power supply again. The drive clicks.
5. Press the PAIR key on a new hand-held transmitter for at least 2 sec. The drive clicks, the new hand-held transmitter is taken-in.



ATTENTION: The lost hand transmitter is still stored in the drive. If you are not sure where this hand transmitter is, all hand-held transmitters can be deleted by resetting the drive to the delivery state.

Resetting the drive to the delivery state

1. Disconnect the drive from the power supply for at least 2 seconds.
2. Reconnect the drive to the power supply for 10 seconds.
3. Disconnect the drive from the power supply for at least 2 seconds.
4. Connect the drive to the power supply again. The drive clicks.
5. Press the PAIR key on a hand-held transmitter that has already been programmed for at least 7 seconds.
The drive clicks once after approx. 2 sec. and a second time after approx. 7 sec., the drive is reset to the delivery state.

Copying hand-held transmitters without a drive

It is possible to copy the functions of a hand-held transmitter (master hand-held transmitter) to a **new** hand-held transmitter.

The procedure must be carried out separately for each key.


Make the new hand-held transmitter ready to receive.

1. Remove the bottom shell of the new hand-held transmitter. Press the PAIR key with a paper clip or similar of the new hand-held transmitter (A). The LED starts flashing.
2. Press the UP key on the new hand-held transmitter (A) within 4 seconds and **keep it pressed**. The LED starts to light up permanently.

Transferring the key to the new hand-held transmitter

3. Continue to hold down the key on the new hand-held transmitter (A) and align the fronts of the two hand-held transmitters (distance max. 5 mm).
4. Press the UP key on the master hand-held transmitter (B). As soon as the LED on the new hand-held transmitter (A) turns darker, the copying of the UP key is finished and you can release both keys.

Repeat the process with the STOP and DOWN keys.

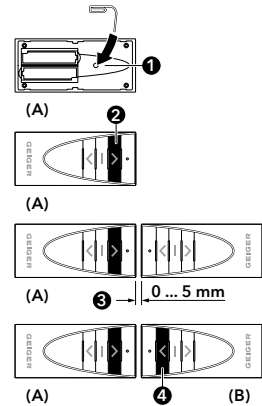


Forming groups with the display hand-held transmitter

Several drives can be combined into a group on one channel of the display hand-held transmitter.

Example:

 Drive 1 is taught-in on channel 1, drive 2 on channel 2 and drive 3 on channel 3. All three drives are to be combined into a group on channel 4.

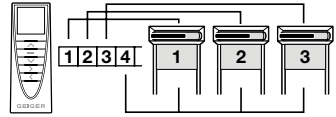

1. Select **channel 1**.
2. Press the PAIR key for at least 5 sec. The drive clicks.
3. Select **channel 4**.
4. Press the PAIR key for at least 5 sec. The drive clicks, the first drive has been added to the group.
5. Select **channel 2**.
6. Press the PAIR key for at least 5 sec. The drive clicks.
7. Select **channel 4**.
8. Press the PAIR key for at least 5 sec. The drive clicks, the second drive has been added to the group.
9. Select **channel 3**.
10. Press the PAIR key for at least 5 sec. The drive clicks.
11. Select **channel 4**.
12. Press the PAIR key for at least 5 sec. The drive clicks, the third drive has been added to the group.

If drive 2 is to be removed from the group again, proceed as follows:

1. Select **channel 2**.
2. Press the PAIR key for at least 5 sec. The drive clicks.
3. Select **channel 4**.
4. Press the PAIR key for at least 5 sec. The drive clicks, the second drive has been removed from the group.


10. Setting of the end positions




CAUTION: In the factory setting, the motor can make 2 rotations in both directions.

EN


Installation configuration

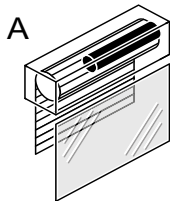


A Top-mounted box/
right-hand installation

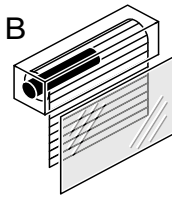

B Front-mounted box/
left-hand installation

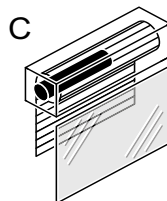

C Top-mounted box/
left-hand installation

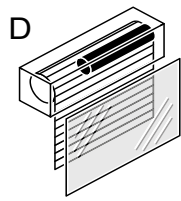

D Front-mounted box/
right-hand installation

The setting of the end positions for installation situations A and B is described below.


In situations C and D, the assignment of the setting screws changes.

To turn the setting screws, use a 4mm hexagon key or the included adjustment aid.

Changing the setting range

Irrespective of the assignment of the setting screws:


- Rotation in **minus** direction **reduces** the setting range
- Rotation in **plus** direction **increases** the setting range

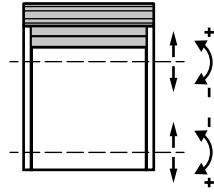

Setting the upper end position

Press the UP key on the control switch until the hanging stops automatically.

Depending on the installation situation, turn the corresponding setting screw with UP key pressed down in PLUS direction until the selected upper end position is reached.

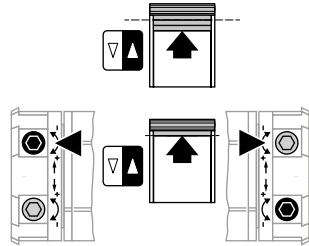


If the upper end position is overrun (the motor switches off too late):

- Press the DOWN key until the hanging is below the selected end position.
- Turn the setting screw a few turns in MINUS direction and repeat the procedure described above again.

Setting the lower end position

Press the DOWN key on the control switch until the hanging stops automatically.

Depending on the installation situation, turn the corresponding setting screw with DOWN key pressed down in PLUS direction until the selected lower end position is reached.

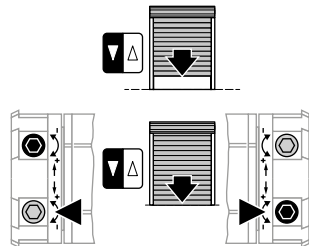

If the lower end position is overrun (the motor switches off too late):

- Press the UP key until the hanging is above the selected end position.
- Turn the setting screw a few turns in MINUS direction and repeat the procedure described above again.

11. What to do if...

Problem	Solution
Motor does not run.	<ul style="list-style-type: none"> • Motor not plugged in. Please check the plug connection. • Check connecting cable for possible damage. • Check the mains voltage and allow the cause of the voltage breakdown to be tested by a specialist electrician. • Hand-held transmitter is not taught-in. • Check the transmitter and replace the batteries in the transmitter if necessary.
Instead of in the upwards direction, motor runs downwards.	<ul style="list-style-type: none"> • The control leads are interchanged. Exchange black/brown control leads.
Motor only runs in one direction.	<ul style="list-style-type: none"> • Motor in the end position. Run motor in the opposite direction. • Check control leads.
After running several times, the motor breaks down and no longer responds.	<ul style="list-style-type: none"> • The motor became too hot and has switched off. Try it again after a cooling time of about 15 min.
The adjusted end position is not correct.	<ul style="list-style-type: none"> • Adjusting knob not pressed properly. Repeat adjustment process, press adjusting knob deeply. • Actuator does not rotate simultaneously. Push shaft onto tube actuator, repeat adjustment process.
The drive does not click during commissioning, the hand-held transmitter cannot be programmed.	<ul style="list-style-type: none"> • A hand-held transmitter has already been programmed. Teach-in a new hand-held transmitter as described in chapter „Further functions > Replacing a lost hand-held transmitter“ and, if necessary, reset the drive to the delivery status.

EN

12. Declaration of conformity

GEIGER
ANTRIEBSTECHNIK

EU Declaration of Conformity

Gerhard Geiger GmbH & Co. KG
Antriebstechnik
Schleifmühle 6
D-74321 Bietigheim-Bissingen

Product designation:

Venetian blinds motor, motor for rolling shutters, motor for awnings

Type designation:

GJ56.., GR45.., GU45.., GSI56.., GB45.., GB35..

Applied directives:

2006/42/EG
2014/53/EU
2011/65/EU + (EU)2015/863 + (EU)2017/2102

Applied standards:

EN 60335-1:2012
EN 60335-1:2012/AC:2014
EN 60335-1:2012/A11:2014
EN 60335-1:2012/A13:2017
EN 60335-1:2012/A1:2019
EN 60335-1:2012/A14:2019
EN 60335-1:2012/A2:2019
EN 60335-2-97:2006+A11:2008+A2:2010+A12:2015
EN 62233:2008
EN 62233 Ber.1:2008
EN 55014-1:2017
EN 55014-2:2015
EN 61000-3-2:2019
EN 61000-3-3:2013

ETSI EN 301 489-1 V2.2.0(2017-03)
ETSI EN 301 489-3 V2.1.1(2019-03)
ETSI EN 300 220-2 V3.1.1(2017-02)

DIN EN IEC 63000:2019-05

Authorized representative for technical data:

Gerhard Geiger GmbH & Co. KG

Address:

Schleifmühle 6, D-74321 Bietigheim-Bissingen

Bietigheim-Bissingen, 20.04.2022



Roland Kraus (General Manager)

100W1518 en 0422

Gerhard Geiger GmbH & Co. KG
Schleifmühle 6 | D-74321 Bietigheim-Bissingen
Phone +49 (0) 7142 9380 | Fax +49 (0) 7142 938 230 | info@geiger.de | www.geiger.de
Sitz Bietigheim-Bissingen | Amtsgericht Stuttgart HRA 300591 | USt-IdNr. DE145002146
Komplementär: Geiger Verwaltungs-GmbH | Sitz Bietigheim-Bissingen | Amtsgericht Stuttgart HRB 300481
Geschäftsführer: Roland Kraus | WEEE-Reg.-Nr. DE47902323

Current declarations of conformity are available under www.geiger.de

13. Technical data

Technical data of tubular motor PRO.TECl ine Radio (GB45R-../..)					
	GB45R-10/15	GB45R-20/15	GB45R-30/15	GB45R-40/15	GB45R-50/12
Voltage	230 V~/50 Hz				
Current	0,47 A	0,63 A	0,80 A	1,00 A	1,00 A
Cos Phi (cosφ)	>0,95				
Inrush current (factor)	x 1,2				
Power	105 W	140 W	180 W	220 W	220 W
Torque	10 Nm	20 Nm	30 Nm	40 Nm	50 Nm
Speed	15 rpm	15 rpm	15 rpm	15 rpm	12 rpm
Protection class	IP 44				
Total length	558 mm	578 mm	608 mm	638 mm	638 mm
Operating mode	S2 4 min				
Sound pressure level¹⁾	39 dB(A)				
Diameter	45 mm				
Limit switch range	22 rotations				
Weight	ca. 2,10 kg	ca. 2,20 kg	ca. 2,20 kg	ca. 2,60 kg	ca. 2,60 kg
Air humidity	dry and non-condensing place				
Storage temperature	T = -15°C .. +70°C				

¹⁾ The average sound pressure level data are intended for guidance only. The values were determined by GEIGER at a distance of 1 m, with a hanging motor at idle speed and averaged over 10 seconds. There is no reference to any specific test standard.

Subject to technical modifications. Please find information to the ambient temperature range of our GEIGER motors under www.geiger.de

14. Maintenance

The drive is maintenance-free.

15. Disposal information

Disposal of packaging materials

Packaging materials are raw materials and can therefore be reused. In the interest of environmental protection, please dispose of them properly.

Disposal of electrical and electronic equipment

According to the EU Directive, electrical and electronic equipment must be collected and disposed of separately.

For technical questions, please call our service team at: **+49 (0) 7142 938 333**. They will be happy to assist you.

GEIGER
ANTRIEBSTECHNIK

Gerhard Geiger GmbH & Co. KG
Schleifmühle 6 | D-74321 Bietigheim-Bissingen
T +49 (0) 7142 9380 | F +49 (0) 7142 938 230
info@geiger.de | www.geiger.de

