



1: GF0021/-27 Display LCD:

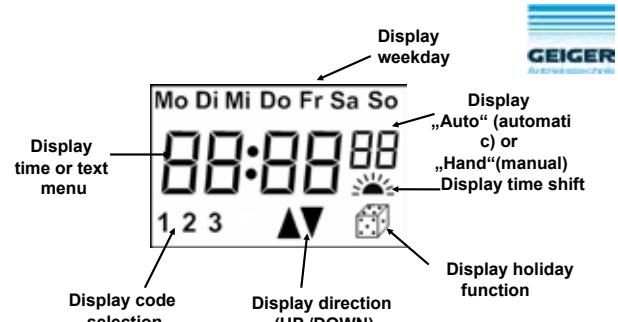


4: GF0021/-27 Menu setup:


In programming mode there is a total of seven menu items. Use UP/DOWN keys to select options.

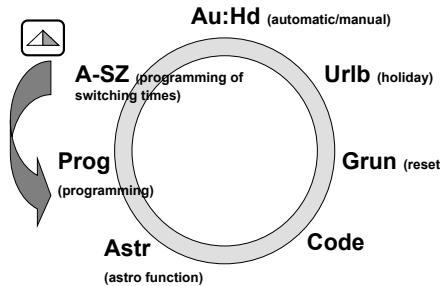

7: Prog (Programming field):

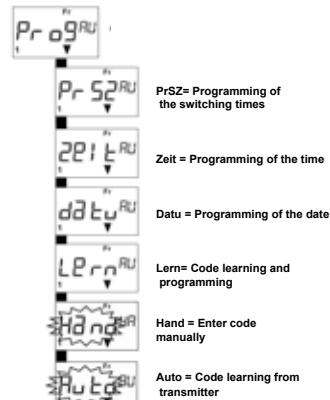


2: GF0021/-27 Operating keys:

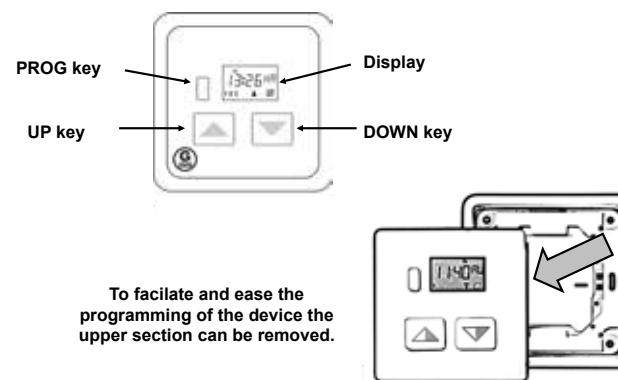


3: GF0021/-27 Operating keys:

- ▶ Actuate the key **PROG** to change over to the programming mode
- ▶ Select menu items with the **UP/DOWN** keys
- ▶ Confirm with the key **PROG**.
- ▶ Actuate the **UP/DOWN** keys simultaneously to cancel all settings that have not been confirmed and exit the programming mode.
- ▶ If no key is actuated, all previously made changes are cancelled after the expiry of a 40 second time and the clock returns to normal mode.


5: Au:Hd (Change-over from manual to automatic mode):

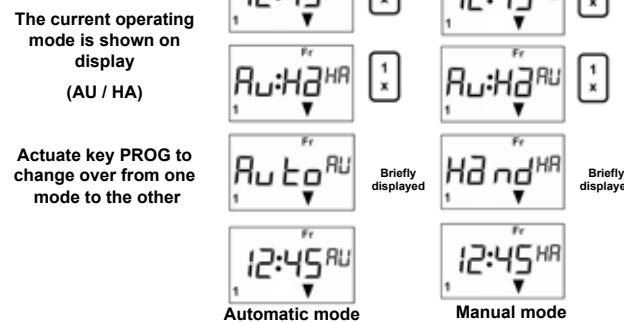


6: A-SZ (Programming of the switching times)

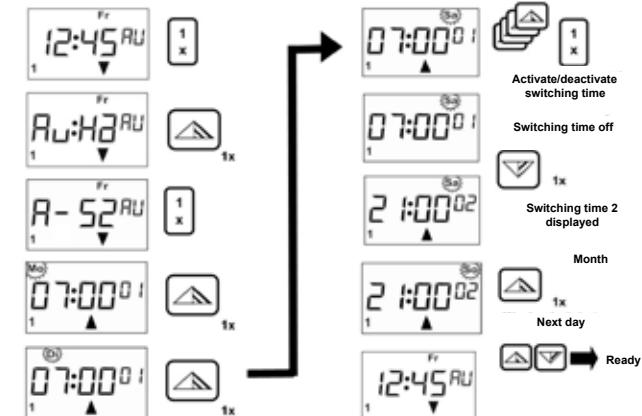


8: PrSz (Programming switching time / weekday)

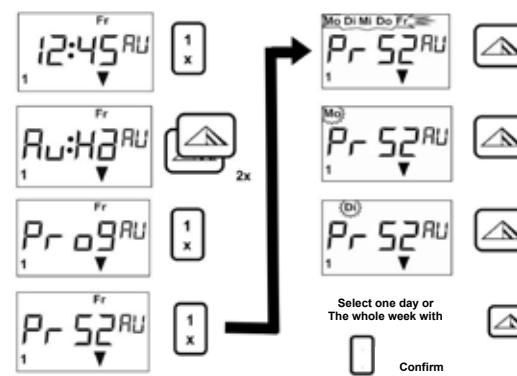


9: PrSz (Programming of 4 switching times):

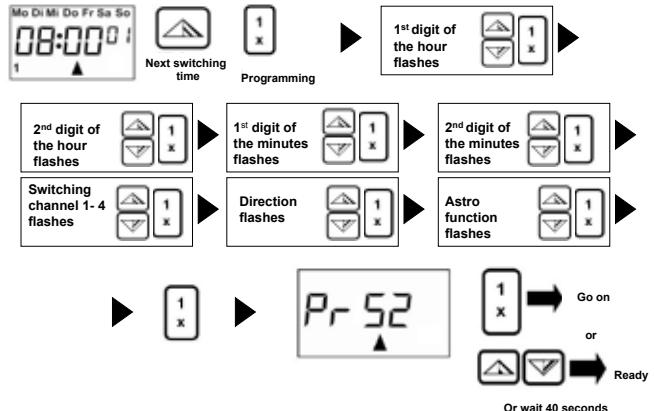


10: Zeit (Setting of the time):

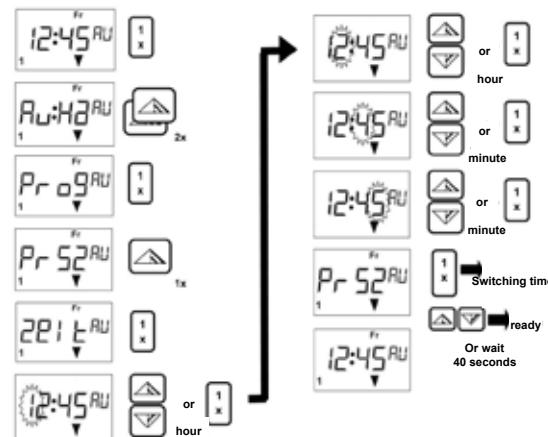


11: datu (Setting of the date):

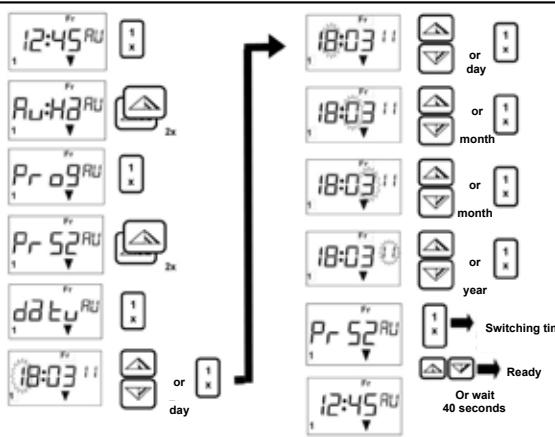


12: Lern (Learning and programming of codes):

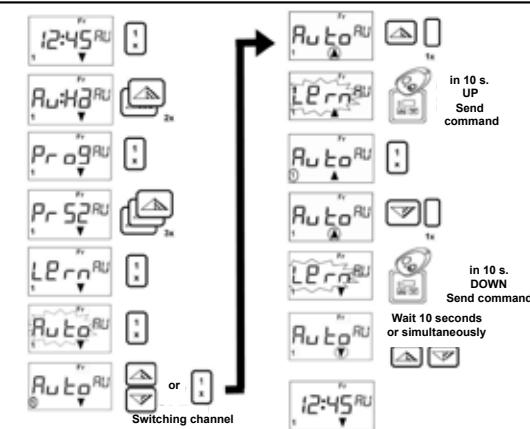

13: Astr (time shift):

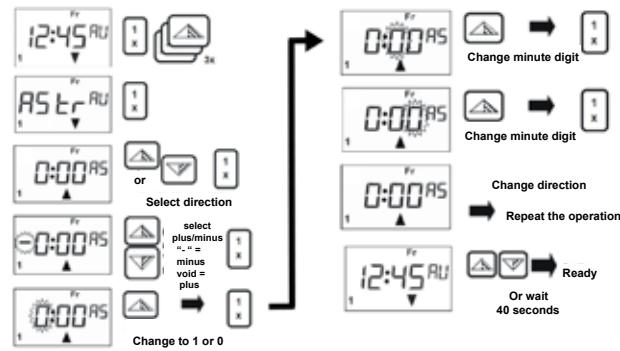


14: Astr (Setting of the degree of latitude):

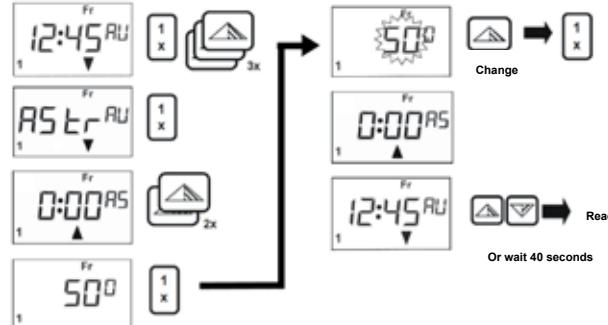

15: Astr (latitudes / towns):

- 44° - Florenz, Bordeaux, Minneapolis
- 47° - Salzburg, Wien, Angers, Seattle
- 50° - Köln, Mainz, Leipzig, Lilles, Brussels
- 52° - Hannover, Berlin, Amsterdam
- 54° - Hamburg, Vilnius
- 56° - Kopenhagen, Riga
- 57° - Göteborg
- 58° - Stavanger
- 59° - Stockholm
- 60° - Helsinki


16: Codes (Display and selection):

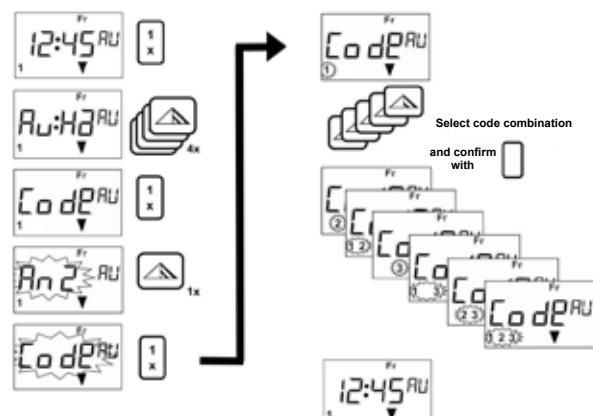

17: Grun (basic settings):

All settings are deleted !

Back to initial setting:
time and date must be
reset.

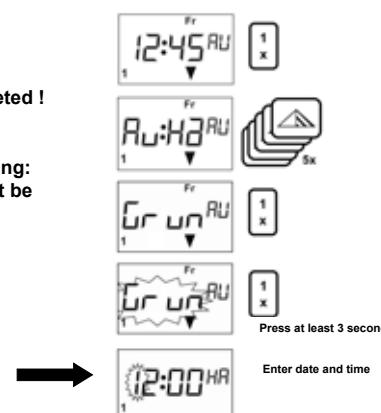

18: Urlb (activate/deactivate holiday function):

