
 
 





Operating Instructions GF0.10

The hand-held transmitter GF0.10 has been specially designed for the operation of one or several simultaneously moving awnings (retracting enabled via key , extending via key ).

The control keys  and  have been equipped with a special function for the activation or deactivation of the sun-automatic ( = sun-automatic "OFF",  = sun-automatic "ON").

 
The required coding is realised by means of the coding switch (DIP switch) that exists inside the hand-held transmitter.

In the event the LED doesn't light up if actuating one of the control keys, the battery needs to be replaced.

Battery: 12 V, type A23. The following battery types can be used for replacement: 23A, VA23A, MS21 or MN21.

Spent batteries must be disposed of in compliance with the relevant national rules currently operative and in force.

Transmit frequency: 433.92 MHz

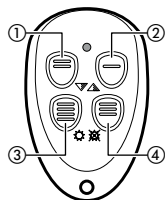

- ① Extending
- ② Retracting
- ③ Sun-automatic "ON"
- ④ Sun-automatic "OFF"

	1	2	3	4	5	6	7	8	9
+	■	■	■	■	■	■	□	□	□
0	□	□	□	□	□	□	□	□	□
-	□	□	□	□	■	■	■	■	■

Individual coding *Allocation of sensor signal*

To make a code setting or to replace the battery, please loosen the crosshead screws (Phillips screws) that exist at the bottom of the hand-held transmitter by means of a cross-slot screwdriver (size PZ 0, ISO 8764) and separate the two half-shells from each other. Use the DIP switches No. 1 to 6 in order to set the desired personal coding.

The transmitter complies with the relevant technical regulations enacted by the European Community. It bears the CE mark and is authorised for use in all EU member states and in Switzerland without any need of prior registration. To learn more about the EC Declaration of Conformity pertaining to this hand-held transmitter, please visit our website at: www.geiger.de.