Handheld transmitters GF1150/GF1151

The hand-held transmitters GF1150 and GF1151 allow the simultaneous control of one or several sun protection systems.

Extension key



The code setting is realized through a coding switch in the handheld transmitter.

The lower two control keys have a special function to turn on or off the sun automatic function.

Sun automatic ON 🛟



The code setting is realized through a coding switch in the handheld transmitter.

Transmit frequency: 433,92 MHz

The transmitter complies with the relevant technical regulations enacted by the European Community. It bears the CE mark and is authorized for use in all EU member states and in Switzerland without any need of prior registration.

To learn more about the EC Declaration of Conformity pertaining to this hand-held transmitter, please visit our website at: www.geiger-antriebstechnik.de

To make a code setting or to replace the battery, open the battery compartment on the front side of the housing.

Use the DIP switches 1 - 7 in order to set the desired individual codings. The DIP switches 8 + 9 remain in the middle position as the channel assignment is fixed.

In the event the LED doesn't light up if actuating one of the control keys, the battery needs to be replaced.

Battery: 12 V, type A23.

The following battery types can be used for replacement: 23A, VA23A, MS21 or MN21.

Spent batteries must be disposed of in compliance with the relevant national rules currently operative and in force.

