

Handheld transmitters GF1200/GF1201

The hand-held transmitters GF1200 and GF1201 allow the simultaneous control of two or several sun protection systems.

Channel 1: Extension key ▼ Retraction key ▲
Channel 2: Extension key ▼ Retraction key ▲

The code setting is realized through a coding switch in the handheld transmitter.

Transmit frequency: 433,92 MHz

The transmitter complies with the relevant technical regulations enacted by the European Community. It bears the CE mark and is authorized for use in all EU member states and in Switzerland without any need of prior registration.

To learn more about the EC Declaration of Conformity pertaining to this hand-held transmitter, please visit our website at: www.geiger-antriebstechnik.de

To make a code setting or to replace the battery, open the battery compartment on the front side of the housing.

Use the DIP switches 1 - 7 in order to set the desired individual codings. The DIP switches 8 + 9 remain in the middle position as the channel assignment is fixed.

In the event the LED doesn't light up if actuating one of the control keys, the battery needs to be replaced.

Battery: 12 V, type A23.

The following battery types can be used for replacement: 23A, VA23A, MS21 or MN21.

Spent batteries must be disposed of in compliance with the relevant national rules currently operative and in force.

