

Hand-held transmitter GF1301PN

The hand-held transmitter GF1301PN allows the operation of three functions on a radio-controlled sun protection system.

Key 1: slats turning/closing



Key 4: slats turning/opening



Key 2: slats extension



Key 5: slats retraction



Key 3: light off/ darker light



Key 6: light on / brighter light



Key 1, 2, 4 and 5:

less than 1,5 s. = light touch

more than 1,5 s. = automatic mode

Key 3 and 6:

less than 1,5 s. = light on/off

more than 1,5 s. = darker/brighter light

The code setting is realized through a coding switch in the handheld transmitter.

Transmit frequency: 433,92 MHz

The transmitter complies with the relevant technical regulations enacted by the European Community. It bears the CE mark and is authorized for use in all EU member states and in Switzerland without any need of prior registration.

To learn more about the EC Declaration of Conformity pertaining to this hand-held transmitter, please visit our website at: www.geiger.de

To make a code setting or to replace the battery, remove the crosshead screw at the back of the housing in order to open the battery compartment.

Use the DIP switches 1 - 7 in order to set the desired individual codings. The DIP switches 8 + 9 remain in the middle position as the channel assignment is fixed.

In the event the LED doesn't light up if actuating one of the control keys, the batteries need to be replaced.

Battery: 2 x 1,5 V, type AAA

Spent batteries must be disposed of in compliance with the relevant national rules currently operative and in force.

