

Handheld transmitters GF1300/GF1301

The hand-held transmitters GF1300 and GF1301 allow the simultaneous control of three different sun protection systems.

Channel 1:	Extension key 	Retraction key 
Channel 2:	Extension key 	Retraction key 
Channel 3:	Extension key 	Retraction key 

The three keys on the left side control the retraction and the three keys on the right side control the extension. The code setting is realized through a coding switch in the handheld transmitter.

Transmit frequency: 433,92 MHz

The transmitter complies with the relevant technical regulations enacted by the European Community. It bears the CE mark and is authorized for use in all EU member states and in Switzerland without any need of prior registration.

To learn more about the EC Declaration of Conformity pertaining to this hand-held transmitter, please visit our website at: www.geiger-antriebstechnik.de

To make a code setting or to replace the battery, remove the crosshead screw at the back of the housing in order to open the battery compartment.

Use the DIP switches 1 - 7 in order to set the desired individual codings. The DIP switches 8 + 9 remain in the middle position as the channel assignment is fixed.

In the event the LED doesn't light up if actuating one of the control keys, the batteries need to be replaced.

Battery: 2 x 1,5 V, type AAA

Spent batteries must be disposed of in compliance with the relevant national rules currently operative and in force.

