

Handsender
Handheld transmitters
Télécommandes




Handheld transmitter

Remote AIR GF2900

EN

**Original assembly and
operating instructions**

EN

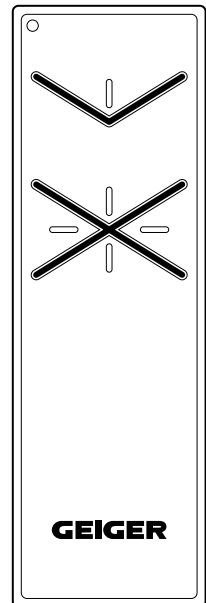

1. General information

Dear customer,

By purchasing a GEIGER Remote AIR handheld transmitter you have decided on a quality product from GEIGER.

Thank you very much for your decision and the confidence placed in us.

2. Guarantee

In the case of incorrect installation contrary to the operating instructions and/or constructional modification, the legal and contractual guarantee for property damage and product liability lapses.

3. Handheld transmitter specific safety information

Please observe following instructions in order to avoid damage to this product:


- ▶ **Avoid impacts.**
- ▶ **Do not drop the device.**
- ▶ **Do not immerse in water or any liquid. Ensure protection against splashing water.**
- ▶ **Never use cleaning agents or abrasive solvents. Clean the surface of the transmitter with a damp cloth.**

4. Scope of delivery

- Handheld transmitter
- Battery type button cell CR2032 (not installed)
- Quick start guide

5. Remote AIR transmitter / Assignment of keys

No.	Function
①	Channel and sun automatic display light (yellow) Channel 1: 1 x short flash Channel 2: 2 x short flash Channel 3: 3 x short flash Sun automatic: 1 x long flash
②	STOP key
③	Channel selection key RIGHT
④	UP key
⑤	Channel selection key LEFT
⑥	DOWN key

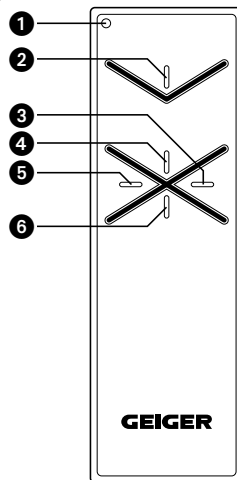

EN

6. Insert/remove/replace battery

Remove the cover on the back of the handheld transmitter with a coin (turn counter clockwise) and insert the supplied battery or a new one. To close, put the cover back with a coin in clockwise direction.

If the display doesn't light up if actuating one of the control keys, the batteries need to be replaced. Please use the same type of battery (CR2032).

7. Learning the handheld transmitter with a GEIGER motor

Please refer to the operating instructions of the motor for the learning of the handheld transmitter with the motor and the setting of the end stops.



The handheld transmitter Remote AIR cannot be connected with the Loxone Smart Home control.

8. Switch the automatic sun function on and off

To switch the sun automatic function on and off, please refer to the operating instructions of the weather station AIR.

9. Technical data

Transmitting frequency	868 MHz
Temperature range	between -0°C and +55°C
Dimensions	106 x 34 x 10 mm
Protection class	IP 20
Power supply	3V type CR2032

Subject to technical modifications



10. Declaration of conformity

The transmitter complies with the relevant technical regulations enacted by the European Union. It bears the CE mark and is authorised for use in all EU member states and in Switzerland without any need of prior registration.

Current declarations of conformity are available under www.geiger.de

11. Disposal

Recycling of packaging materials

Packaging materials are raw materials and, therefore, recyclable. In the interest of environmental protection, please contact your local government's recycling or solid waste management department to learn more about the services it provides.

Waste disposal of electric and electronic equipment

According to the EC directives, all waste electrical and electronic equipment should be disposed of and collected separately.

**For technical questions, please call our service team at: +49 (0) 7142 938-333.
They will be happy to assist you.**



Gerhard Geiger GmbH & Co. KG
Schleifmühle 6
D-74321 Bietigheim-Bissingen
Telephone: +49 (0) 7142 938-0
Telefax: +49 (0) 7142 938-230
E-Mail: info@geiger.de
Internet: www.geiger.de

