

GF0.06 – Operating Instructions

The hand-held transmitter GF0.06 enables to control up to 6 different receivers. The code setting is realised through a DIP switch (coding switch) and a learning mode operating switch fitted inside the battery compartment above the battery.

The code setting is realised through a DIP switch (coding switch) and a learning mode operating switch fitted inside the battery compartment above the battery.

To make a code setting or to replace the battery, open the cover of the battery compartment as described opposite:

In the event the LED doesn't light up if actuating one of the control keys, the battery needs to be replaced.


Battery: 12 V, type A23. The following battery types can be used for replacement: 23A, VA23A, MS21 or MN21.

Spent batteries must be disposed of in compliance with the relevant national rules currently operative and in force.

Transmit frequency: 433.92 MHz

Code setting:

1. Use the group selector switch ② to select the desired group.
2. To change the complete coding for the related group in one go, slide the left learning mode operating switch ⑤ in upward direction.
3. If you'd like to change the coding of one control key only, the right learning mode operating switch ⑤ too must be slid into top position.

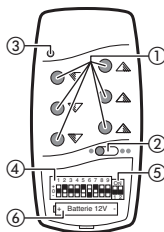

- ① Control keys (6 keys).
- ② Group selector switch
- ③ LED lights up when actuating any control key (prerequisite: battery still in good condition)
- ④ DIP switch (9-pole type): enable to individual codings
- ⑤ Learning mode switch (2-pole type): serves for the coding of the transmitter
- ⑥ Battery, type MN21 (12 V; take care to ensure that the battery is inserted with the battery poles in correct position)

To open the battery compartment, use an appropriate tool, e.g. a screw driver.

4. Use the DIP switch ④ to make the desired individual code settings.
5. Actuate the control key ①: if both learning mode operating switches ⑤ are in top position, the coding stored with regard to the actuated control key is programmed anew and stored in the transmitter. With only the left learning mode operating switch ⑤ in top position, all group related codings (3 keys) are being set anew. In any such case, the last two positions of the DIP switch ④ are rendered ineffective, as these are fixly selected by the transmitter.
6. If other channels shall be coded, please repeat steps 1 to 5 described here above.
7. **After completion of the desired coding procedure, always make sure to slide both learning mode operating switches ⑤ into the bottom position again by all means.**

Note: Once the coding procedure is completed, the position of the DIP switch ④ can be varied in such manner that no unauthorised persons are able to identify which codings have actually been selected.

The transmitter complies with the relevant technical regulations enacted by the European Community. It bears the CE mark and is authorised for use in all EU member states and in Switzerland without any need of prior registration. To learn more about the EC Declaration of Conformity pertaining to this hand-held transmitter, please visit our website at: www.geiger-antriebstechnik.de.